




CAUTION

- Installation should only be performed by a qualified professional.
- Install in accordance with all appropriate wiring standards.
- DALI is not SELV and needs to be wired accordingly.
- Never connect a LED luminaire to a driver that is powered. Doing so may result in damage to the LED.
- Always make sure the output voltage range and output current of the LED driver match the requirements of the LED luminaire. Failure to do so may result in damage to both the driver and the luminaire.
- The light source contained in this luminaire shall only be replaced by the manufacturer, specified service agent or a similar qualified person.
- Do not install under mechanical stress.
- Allow for expansion due to changes in temperature.
- Please be aware that while the system has a very long operational life, faults may occur, and provision needs to be made for maintenance.
- Always turn off power before working on luminaire.

Overview

Surface Mount

Dimensions	190mm x 277mm
Weight	3.7kg

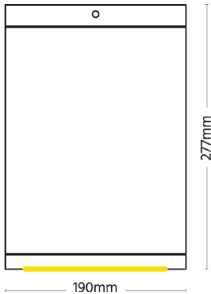


*Refer to page 3-5 for installation and wiring diagram.


Installation - Surface Mount | Suspended

Wiring Diagram - Connecting to Terminal Block

Remote Mains | DALI

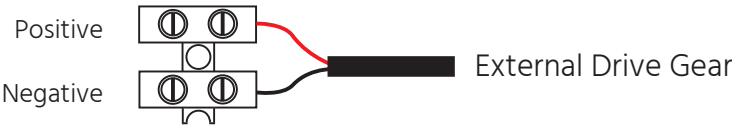

Integral Mains

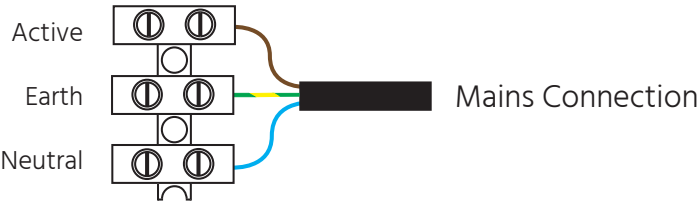


Integral DALI




*Use round 5 core cable for Integral DALI

Note: Wire colours are indicative only. Colours may vary.


Installation Process - Surface Mount

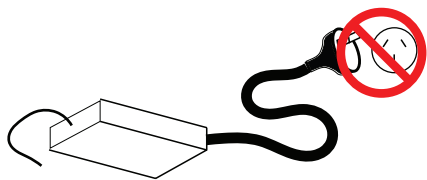


1. Install remote drive gear as required. Refer to wiring diagram and drive gear instructions. Do not power up.

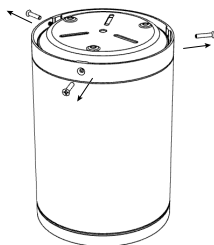


2. Remove the 3 screws holding the mounting plate in the luminaire.

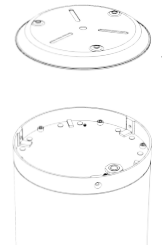


3. Slide mounting plate out of the luminaire.

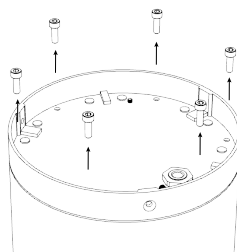


4. Remove the 6 screws securing the rear (top body) of the luminaire.

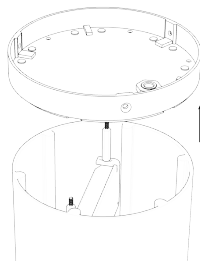


5. Remove the rear of the fitting (top body) and disconnect the plug/socket from Driver to LED.

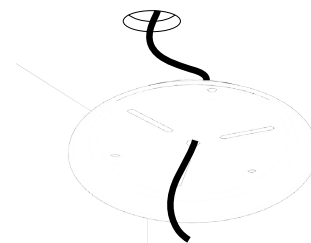


6. Feed power and data cable (if applicable) through the central hole of the mounting plate.

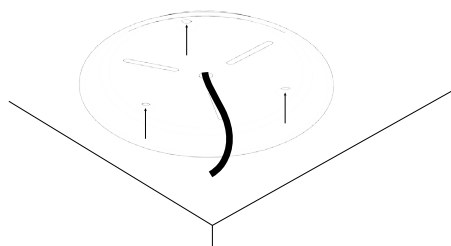

7. Secure the mounting plate to the mounting surface using suitable fasteners.

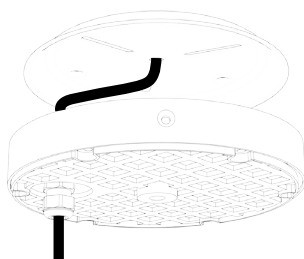


8. Feed power & data cable (if applicable) through the cable gland on the top body. Leave approximately 100mm of cable between the mounting plate & the luminaire rear assembly. *

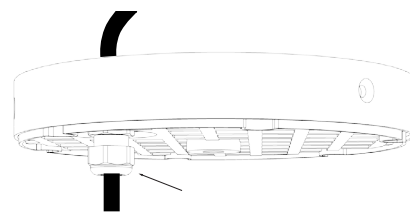


9. Tighten glands to ensure a seal is achieved around the cable. Note: glands are reversed inside the luminaire.

*In order to maintain IP rating, cables are required to be round with a diameter between 5mm and 10mm.


Installation Process Continued

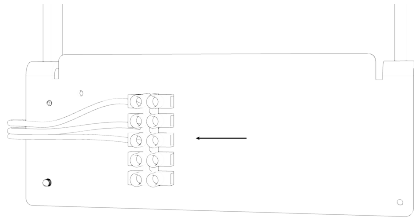


10. Connect power and control (if applicable) to the terminals on the rear side of the driver plate in the luminaire. Refer to wiring diagram.

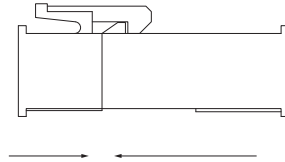


11. Reconnect the plug/socket from the driver to the LED.

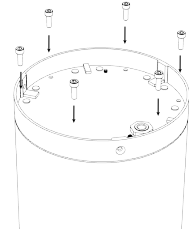


12. Align the top body to the main housing and secure in place using the 6 screws.

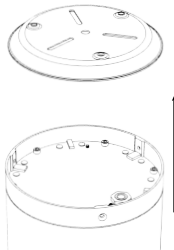

13. Slide the luminaire over the mounting plate, allowing excess cable to fold over as required.

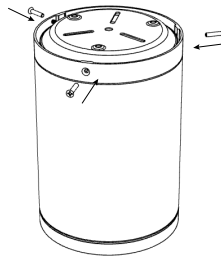

14. Secure the luminaire to the mounting plate using the 3 screws.

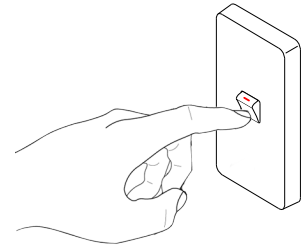

15. Turn on power.